


**Product Name :**  
Power Supply, 13.5 V, 45 A

**Product Code :**  
LIM-CAT-L0052-00008

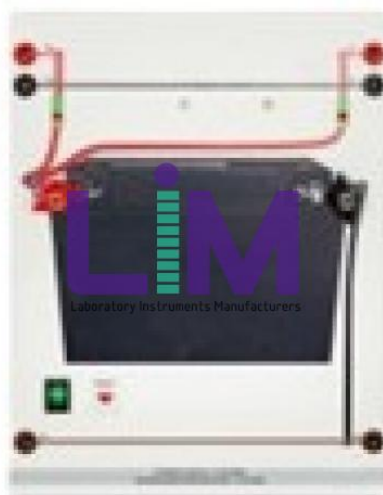

**Description :**

Power Supply, 13.5 V, 45 A

**Technical Specification :**

The "Power supply" module is part of various training systems including the "Modular engine management" system.

It provides power to various components in a similar to the way they are supplied in practice in a real engine by means of a 12 V battery.

The module employs a 600 watt power unit which can supply a maximum current of 45 A at 13.5 V between its screw terminals.

To protect the training system, a maximum current of 30 A can be tapped via the 4-mm safety sockets.

This protective function is implemented by electronic monitoring of the 4mm safety sockets.

Stable on-board network voltage of 13.5 volts

Automatic cut-out without fuses

Short-circuit protection

Maximum current: 45 A

Operating voltage: 90-264 V AC (47-63 Hz)

Dimensions: 297 x 227 x 180 mm (HxWxD).

---

# Laboratory instruments manufacturers India

