


Product Name :
Control Board ,Single Phase Compressor Training Unit

Product Code :
LIM-CAT-L0081-00001

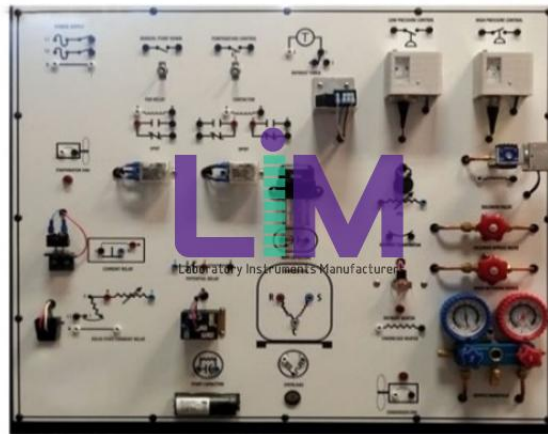

Description :

Control Board ,Single Phase Compressor Training Unit

Technical Specification :

Control board ,single phase compressor training unit

Consists of a single phase compressor with components necessary to demonstrate all common type of controls in refrigeration and air conditioning systems.

Electrical requirements: 220V,50Hz

Uses : R-134a refrigerant

Components are wired into the system with patch cords.

Shut-off valves in suction and pressure lines allow pressure to be varied to operate the low pressure control and high pressure cutout.

PSC (permanent split capacitors) and run capacitors are supplied for capacitor (capacitive) start systems.

Includes operational manual

